

# MECHANICAL BREAKDOWN PROTECTION

## WHAT ARE MY OPTIONS?

With a full complement of affordable coverage options, ASG's protection is the ideal solution to protect your investment and reduce out-of-pocket expenses should a mechanical breakdown occur.

## PROTECTION FROM THE UNEXPECTED

Your vehicle is not only an investment; it's your transportation lifeline. With ASG's protection plan, you have the peace of mind knowing your investment is protected.

	Platinum +	Gold	Silver	Copper
Hardware	◆	◆		
Audio Center	◆	◆		
Fuel	◆	◆	◆	
Suspension	◆	◆	◆	
Steering	◆	◆	◆	
Air-Conditioning	◆	◆	◆	
Electrical	◆	◆	◆	
Brakes	◆	◆	◆	
Drive Axle	◆	◆	◆	
Transmission / Transfer Case	◆	◆	◆	
Engine	◆	◆	◆	

## GET THE MOST OUT OF YOUR COVERAGE

With four levels of coverage, ASG's protection offers affordable options to ensure your vehicle is protected against costly mechanical and electrical repairs.

### COVERAGE BENEFITS\*

#### Roadside Assistance

All of our plans provide reimbursement for Roadside Assistance. The emergency services include:

- Lock-Out Assistance
- Fuel Delivery Services
- Flat Tire Assistance
- Battery Service

#### Rental Vehicle Assistance

In the event of a covered mechanical breakdown, you will be eligible for alternate transportation expenses according to the schedule in your contract.

#### Tire Road Hazard

ASG's protection plans provide coverage for the repair, or if necessary, the replacement of your vehicle's tires if damaged due to a road hazard.


#### Trip Interruption

In case of a mechanical breakdown that occurs more than 100-miles away from your home and results in a repair facility keeping your vehicle overnight, you are eligible to be reimbursed for meals and lodging for up to three days.

\* This brochure highlights the benefits of ASG's protection plans. Please refer to the actual service contract for coverages, exclusions, terms and conditions

## PROTECT YOUR VEHICLE

The vast majority of costly mechanical and electrical failures occur **AFTER** the factory warranty has expired. Avoid expensive repairs by protecting your vehicle with a Mechanical Breakdown Protection contract!

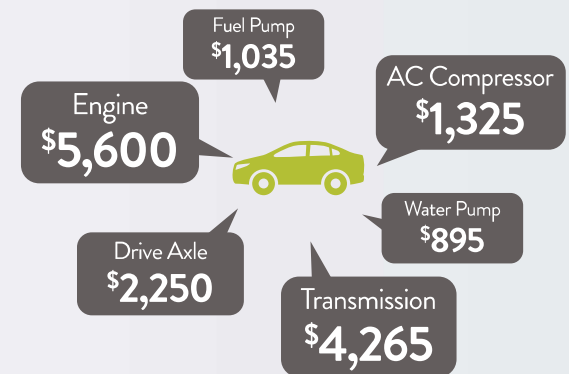

The above is for illustration purposes only.

Based on average repair and replacement costs. Actual costs paid may vary.

## GET MORE WITH PLATINUM

PLATINUM

GOLD

SILVER





COPPER



# PERSONALIZE YOUR COVERAGE







**PLATINUM Protection** includes all components listed in Gold, Silver and Copper, extended coverage for virtually all of your vehicle's mechanical and electrical components




**GOLD Protection** includes all components listed in Silver and Copper, plus the following:



-  **ENGINE:** Exhaust manifold · Radiator · Electric fan motor · Water pump housing · Belt tensioner · Engine thermostat · Hot water valve
-  **TRANSMISSION AND TRANSFER CASE:** Electronic shift control: processor, sensor · Four wheel drive actuator
-  **DRIVE AXLE:** Differential Cover
-  **STEERING:** Dampener · Tie rods · Tie rod ends · Steering wheel · Tilt wheel mechanism · Rear wheel steering: control valve and sensor, control unit, shaft and couplings, power cylinder(s), oil pump, stepper motor, rack assembly
-  **BRAKE:** Combination valve · Accumulator · ABS: booster pump, control processor, control sensors, control solenoids, modulator valve, valve and accumulator · Brake calipers · Wheel cylinders



-  **SUSPENSION:** Radius arm and bushing · Stabilizer bar, links and bushings · Strut bearings and bushings · Air suspension compressor · Suspension control computer · Suspension control solenoids · Height sensor · Mode selector switch
-  **ELECTRICAL:** Electronic fuel injection: sensors, control units · Electronic spark timing control unit · Igniter · Power antenna motor · Rear window: defogger unit, defrost grid · Electric power seat motor · Electric convertible top motor · Electric sunroof motor · Electric headlamp motor · Electronic instrument panel: control module, display · Engine wiring harness · Electronic traction control sensors and control module · Electronic suspension air compressor · Factory installed theft alarm system · Factory installed remote keyless entry transmitter/receiver · Inclinator · Illuminated vanity mirrors · Trip/mileage computer

-  **FUEL SYSTEM:** Fuel injection pump · Diesel fuel injectors · Gasoline fuel injectors (for electrical failure only) · Vacuum pump
-  **AIR CONDITIONING:** Pressure switches · Automatic temperature control selector head · Air ducts · Air registers · Control cables · Power module · Plenum doors · Vacuum motors · Heater core
-  **AUDIO CENTER:** Factory installed entertainment chassis modules including: Radio · CD player · Magnetic tape player · Graphic equalizer (Limited repair only, not replacement)
-  **HARDWARE:** Ashtrays · Door: latches, locks, hinges · Hood: latch release mechanism, struts, hinges, torsion bars · Ignition switch lock cylinder · Rear hatch struts · Seat tracks · Deck lid: latch/release, hinges, torsion bars · Power seat transmission · Window: crank handles, regulators · Wiper motor transmission · Altimeter · Compass · Glove box: lock, latch



**SILVER Protection** includes all components listed in Copper, plus the following:



-  **ENGINE:** Engine oil pressure gauge · Radiator coolant recovery unit · Electric radiator fan motor relay/switch · Electric radiator fan motor sensor · Engine coolant temperature gauge · Timing belt
-  **STEERING:** Gear housing/rack assembly and their internal components · Control valve and cylinder · Power cylinder assembly · Steering column shaft(s) and their couplings/bearings · Steering knuckle · Power steering pump, pulley, and mounting brackets · Pitman arm · Idler arm · Drag link · Steering column bearings
-  **BRAKE:** Parking brake cable · Self adjusters · Brake lines & fittings



-  **SUSPENSION:** Wheel bearings · Sway bar and its bushings and linkage · Upper and lower control arms · Control arm shafts and bushings · Upper and lower ball joints · Strut bar · Spindle and support
-  **ELECTRICAL:** Ignition coil · Electronic ignition: module, distributor · Throttle position sensor · Fuel control temperature sensor · Idle control actuator · Manifold vacuum sensor · Crankshaft position sensor · Camshaft position sensor · Igniter · Volt/amp gauge · Wiper motors · Manually operated electrical switches · Horn and horn relay · Electric window motors · Electric mirror motors · Cruise control: module, actuator · Electric door lock: relay, actuator · Electric trunk/taillgate/hatchback actuators · Backup light switch · Brake light

- switch · Door operated courtesy light switches · Neutral safety switch · Windshield washer pump · Cigarette lighter(s) · Auxiliary power point · Tachometer · Headlamp dimmer switch · Map lights · Clock
-  **FUEL SYSTEM:** Fuel tank · Fuel pump · Accelerator pedal · Fuel pressure regulator · Fuel level sending unit · Accelerator pedal linkage · Fuel pressure sensor · Fuel pump relay · Fuel shutoff control · Fuel tank filler pipe · Metal fuel lines · Fuel gauge
-  **AIR CONDITIONING:** Idler pulley and bearing · Manual temperature control selector head · Heater control valve · Idler pulley tensioner

## COPPER Protection

-  **ENGINE:** Cylinder block · Cylinder head(s) · Turbocharger/supercharger and their internal components · Timing gears: Timing/balance shaft chain, guides, tensioners, sprockets and cover (excluding timing belt) · Oil pan · Oil pump · Valve cover(s) · Wastegate · Radiator fan motor · Water pump and pulley · Fan clutch · Fan shroud
-  **TRANSMISSION AND TRANSFER CASE:** Transmission and transaxle cases and their internal components · Torque converter · Vacuum modulator ·

- Gear shift lever · Transmission shift linkage · Pan · Transfer case and its internal components
-  **DRIVE AXLE:** Final drive and axle housings and their internal components · Axles · Axle shafts · Propeller shafts · Constant velocity joints · Universal joints · Yokes
-  **BRAKE:** Master Cylinder · Power brake assist boosters · Backing plate assembly · Brake pedal assembly · Parking brake pedal · Parking brake release mechanism

-  **ELECTRICAL:** Starter motor · Starter motor drive · Starter motor solenoid · Alternator · Voltage regulator · Alternator pulley and mounting bracket
-  **AIR CONDITIONING:** Compressor · Accumulator/Drier only in conjunction with compressor replacement · Condenser · Evaporator · Compressor clutch and coil · Compressor pulley and mounting brackets · Expansion valve · Orifice tube · Blower motor

\*COVERAGES AND EXCLUSIONS – Seals and gaskets are included for covered components. For Copper plan, seals and gaskets are covered only in conjunction with a covered repair. Fluids and filters are included in conjunction with a covered repair. Examples of parts not covered are: Non-Mechanical, Non-Electrical, Non-Pneumatic Or Non-Hydraulic Components; Audio speakers; Batteries; Water and Wind/Air Leaks; Bumpers; Cables; Chassis; Clamps; Fasteners; Convertible Tops And Their Mechanisms; Exhaust/EGR System; Air Pump And Catalytic Converter, PVC System; Fuel Vapor Recovery System; Gasoline Fuel Injectors that do not have an electrical failure; Glass; Hoses; Lines And Fittings; Mirrors; Manual Clutch Components; Passenger/Driver Restraint Systems; Seat Components; Secondary Ignition Components; Suspension Springs; Telephones; Torsion Bars; Wheels; Internet Computer; Telematic Services and Devices (I.E., OnStar); Navigation System; Video Components; Heads-Up Display; Night Vision Systems; Any Component Not Named In Section II What This Contract Covers, Normal Maintenance And Service Items; Alignments; Adjustments; Calibrations; Software Updates; Cleaning; Non-Published Diagnostic Labor; Fuses; Lights/Bulbs/Lenses Assemblies; Wear Items; Accessory Drive Belts; Brake Pads/Shoes/Drums/Rotors; Shocks; Struts; And Wiper Blades. We may use replacement components of a like kind and quality that may be rebuilt, remanufactured, or used. Refer to the contract for the conditions of coverage, exclusions and your duties during the term of the contract.